



# The instruction

## for installation of Noico automotive sound deadener



**Please read the instruction carefully up to the end!**


This is really important as the efficiency of soundproofing doesn't only depend on the material you use but largely on the installation sequence as well. Please note that incorrect installation of a sound deadening material might lead to undesirable results or no results at all.

You can contact us via email [sales@noico.info](mailto:sales@noico.info)



## In order to install soundproofing material you would need:

- 1) Noico Liner Automotive sound deadener
- 2) A carton box knife or construction scissors
- 3) Gloves
- 4) Degreaser
- 5) A cloth for wiping
- 6) Sharpie pen for marking

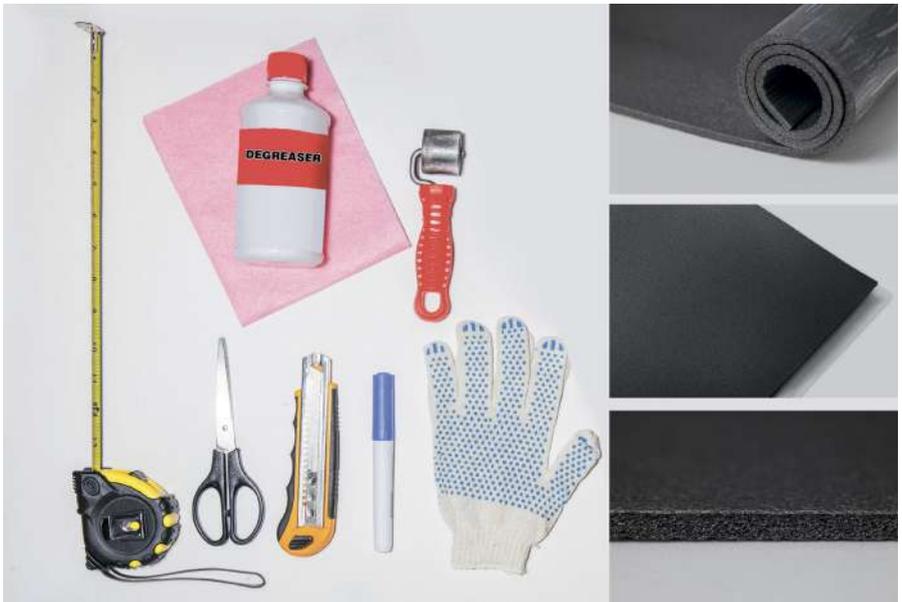

---


\* You can find Noico Liner technical specifications in your order's listing description.

# I. PREPARATION



## STEP 1

Decide what part of the car you want to do first: roof, floor, doors or a hood. Every single part of the car has its own function. That's why we recommend you to soundproof all parts of the car for the maximum soundproofing output.

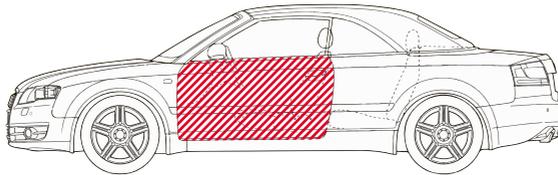

## STEP 2

Locate the guideline instruction to your car on the internet and carefully read as to how to dismantle a certain panels. Be careful when you take off plastic trim parts to avoid breaking the fixings!



Very detailed information can be found on automotive forums. However, If you have any questions, you can email us and we will reply you back with a detailed response within 1-2 working days.

Contact email: [sales@noico.info](mailto:sales@noico.info)



## STEP 3

Remove the remains of the factory sound insulation once you have dismantled the interior (you need to do that if the factory sound insulation is damaged or not properly fixed). You can leave it there if it's still in a good shape.



## STEP 4

Properly clean and degrease the surface prior to installation of deadener. It has to be dry and clean! It won't be properly fixed and may not last long if you apply the material on a wet or dirty surface. Use White Spirit and dry clean rag for the Step 4. We also recommend wearing gloves and air the room from time to time while doing it.

*\* Pre-try the degreaser on a small spot of the treated surface before using that on a painted or plastic exterior.*



## II. SOUNDPROOFING //



### STEP 1

Measure the pre-cleaned surface of the prospective spot that you are going to treat. We recommend you first make a pattern of an appropriate size on paper and then transfer that to the insulation sheet. This will help you to place everything accurately and avoid wasting the material.



---

### STEP 2

Use a stationery knife or construction scissors to trim the desired piece of insulation sheet. Be careful and use gloves for your hand protection.





### STEP 3

Try to locate the piece of material onto the prospective surface of a car without removing an adhesive paper. Make sure that the material covers it.



---

### STEP 4

Now it's time to remove the adhesive paper. But please do not remove it at once. You need to do it gradually for a better adhesion.



---

### STEP 5

Now when your sheet is ready to be used, lay that down to the surface and let it glue. Flatten the sheet with hands to avoid air bubbles and insulation material.





## STEP 6

Assemble the parts of the car back together. Congratulations! You have just soundproofed your car!



### Useful tips:

- For a better installation in case of a cold weather we recommend using a heat gun (Installation require temperature above 53F)

### Please note:

- Material for inside use only
- The allowed temperature is from -49 to 190 degrees Fahrenheit. Normal working temperature is 130-140 degrees Fahrenheit.
- Don't use the material in high temperature parts of the car such as exhaust pipe
- The material cannot be reused in case of dismantling
- The material can be used only on clean dry metal surfaces
- Please observe safety precautions



More installation tips:



If you have any questions,  
please contact us via email:

[sales@noico.info](mailto:sales@noico.info)

[www.noico.info](http://www.noico.info)